# ЛОС

# LCD Monitor User Manual I2778VHE6 (LED Backlight)





Safety	3
National Conventions	3
Power	4
Installation	5
Cleaning	6
Other	7
Setup	8
Contents in Box	8
Setup Stand & Base	9
Adjusting Viewing Angle	10
Connecting the Monitor	11
Wall Mounting	12
AOC Anti-Blue Light Feature Description	13
Adjusting	14
Setting Optimal Resolution	14
Windows 8	14
Windows 7	15
Windows Vista	17
Windows XP	19
Windows ME/2000	20
Hotkeys	21
OSD Setting	23
Luminance	24
Image Setup	26
Color Setup	28
Picture Boost	30
OSD Setup	32
Extra	34
Exit	
LED Indicator	37
Driver	
Monitor Driver	
Windows 8	
Windows 7	42
Windows Vista	45
Windows XP	47
Windows 2000	50
Windows ME	50
i-Menu	51
e-Saver	52
Screen+	53
Troubleshoot	54
Specification	55
General Specification	55
Preset Display Modes	56
Pin Assignments	57
Plug and Play	58

Regulation	
FCC Notice	
WEEE Declaration	60
WEEE Declaration for India	60
EPA Energy Star	61
TCO DOCUMENT	
Service	63
Warranty Statement for Europe	
Warranty Statement for Middle East and Africa (MEA)	65
AOC PIXEL POLICY ISO 9241-307 CLASS 1	
Warranty Statement for North & South America (excluding Brazil)	
EASE PROGRAME	70

# Safety

# **National Conventions**

The following subsections describe notational conventions used in this document.

#### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.

# $\wedge$

**CAUTION**: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING**: A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

#### **Power**

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V ~, Min. 5A

A The wall socket shall be installed near the equipment and shall be easily accessible.

#### Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.


Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Lo not place the front of the product on the floor.

If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

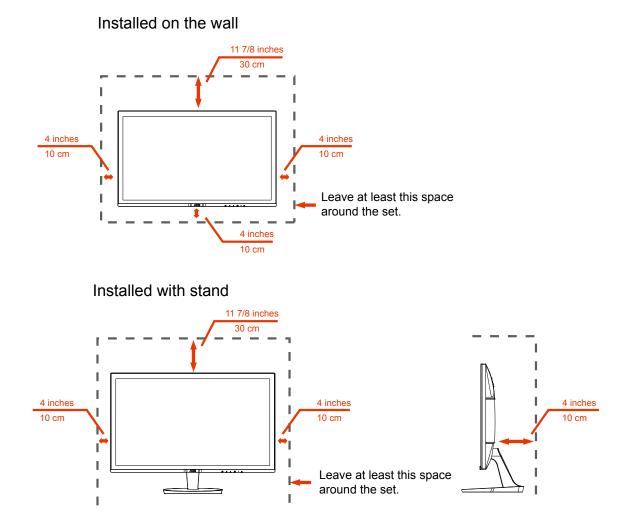


# Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

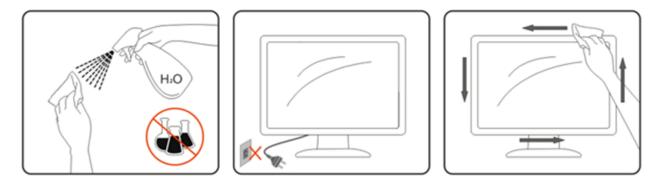

# Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

AMake sure that the ventilating openings are not blocked by a table or curtain.

L Do not engage the LCD monitor in severe vibration or high impact conditions during operation.

L Do not knock or drop the monitor during operation or transportation.

For display with glossy bezel the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

# Setup

# Contents in Box

Analog Cable

★ Not all signal cables (Analog, DVI, HDMI cables) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.


DVI Cable


HDMI Cable

# Setup Stand & Base


Please setup or remove the base following the steps as below.


Setup:

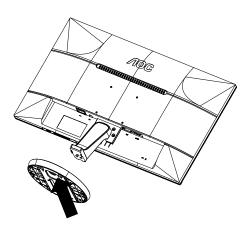

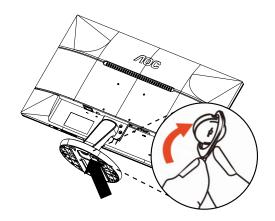

Remove:

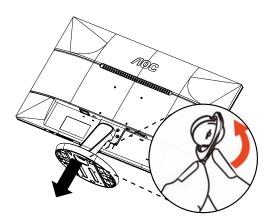

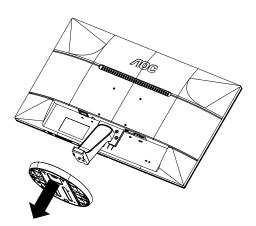


# **Adjusting Viewing Angle**

For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor's angle from -4° to 21°.

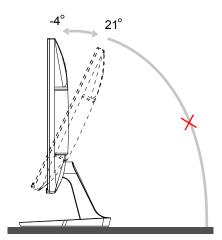

**NOTE**: Do not adjust the viewing angle over 21 degrees in order to avoid damage.


# 

Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.

Do not put your hand close to the gap between the monitor and the base to avoid the injury when adjusting the viewing angle.

# **Connecting the Monitor**

Cable Connections In Back of Monitor and Computer:

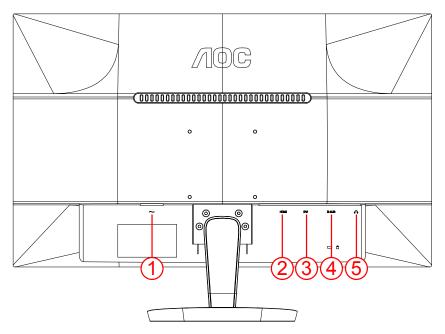

- 1. AC port
- 2. HDMI
- 3. DVI
- 4. Analog (D-Sub 15-Pin VGA cable)
- 5. Earphone


To protect equipment, always turn off the PC and LCD monitor before connecting.

- 1. Connect the power cable to the AC port on the back of the monitor.
- Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.
- 3. (Optional –Requires a video card with DVI port)Connect one end of the DVI cable to the back of the monitor and connect the other end to the computer's DVI port.
- 4. (Optional –Requires a video card with HDMI port)Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.
- 5. Turn on your monitor and computer.

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

# Wall Mounting

Preparing to Install An Optional Wall Mounting Arm.

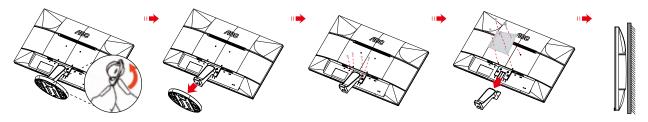

This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

- 1. Remove the base.
- 2. Follow the manufacturer's instructions to assemble the wall mounting arm.
- 3. Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.
- 4. Insert the 4 screws into the holes and tighten.
- 5. Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted : VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

# **AOC Anti-Blue Light Feature Description**

Studies have shown that just as ultra-violet rays can cause eye damage, blue light rays from LED displays can cause damage to different parts of the eye and affect vision over time. AOC Anti-Blue Light feature uses a smart technology to reduce the harmful blue light waves without affecting the color or image of the display.

# Adjusting

# **Setting Optimal Resolution**


#### Windows 8

For Windows 8:


1. Right click and click **All apps** at the bottom-right of the screen.




- 2. Set the "View by" to "Category".
- 3. Click Appearance and Personalization.

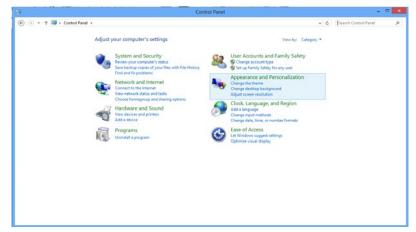

4. Click **DISPLAY**.

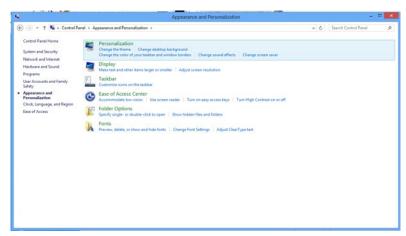

5. Set the resolution **SLIDE-BAR** to Optimal preset resolution.

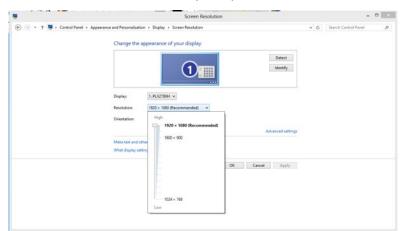

#### Windows 7

For Windows 7:


- 1. Click **START**.
- 2. Click CONTROL PANEL.



3. Click Appearance.



4. Click DISPLAY.

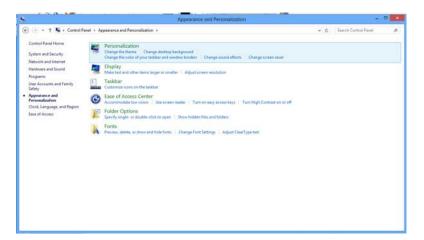

5. Set the resolution SLIDE-BAR to Optimal preset resolution

🖻 🍥 + 🕇 📮 + Control Panel	Change the ap	pearance of your display		
		1	Detect Identify	
	Display: Resolution Orientation:	1. PLX27804 • 1920 = 1080 (Recommended) • High 1920 = 1080 (Recommended)	]	
	Make test and othe What doplay setting		Advanced settings	
			OK Cancel Apply	
		1024 = 768		

#### Windows Vista

For Windows Vista:

- 1. Click START.
- 2. Click CONTROL PANEL.



3. Click Appearance and Personalization.



4. Click Personalization



5. Click Display Settings.



6. Set the resolution SLIDE-BAR to Optimal preset resolution




#### Windows XP

For Windows XP:


1. Click START.




- 2. Click SETTINGS.
- 3. Click CONTROL PANEL.
- 4. Click Appearance and Themes.

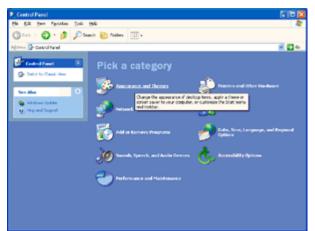

5. Double click **DISPLAY**.

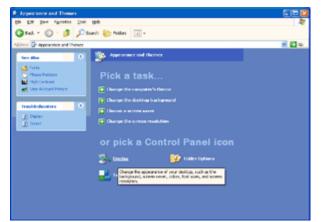

- 6. Click SETTINGS.
- 7. Set the resolution SLIDE-BAR to Optimal preset resolution

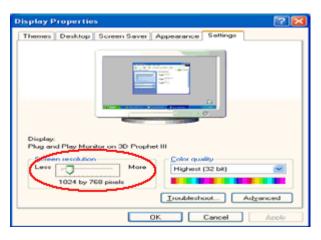


#### Windows ME/2000

For Windows ME/2000:

- 1. Click START.
- 2. Click SETTINGS.
- 3. Click **CONTROL PANEL**.
- 4. Double click **DISPLAY**.
- 5. Click SETTINGS.
- 6. Set the resolution SLIDE-BAR to Optimal preset resolution

## Hotkeys

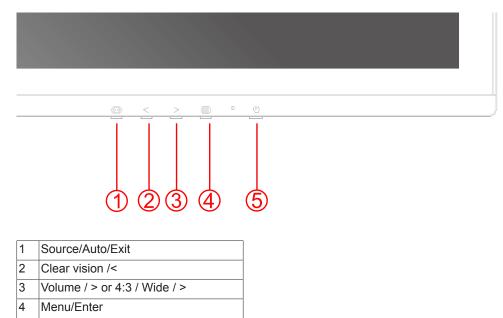

#### Power

Power

5

Press the Power button to turn on/off the monitor.

#### Volume / >

When there is no OSD, press > adjust volume(only HDMI).

#### 4:3 or wide / >

When there is no OSD, press > continuously to change 4:3 or wide image ratio. (If the product screen size is 4:3 or input signal resolution is wide format, the hot key is disable to adjust ).

#### Menu/Enter


Press to display the OSD or confirm the selection.

#### Source /Auto / Exit

When the OSD is closed, press Auto/Source/Exit button continuously about 3 second to do auto configure (only for the models with dual or more inputs). When the OSD is closed, press Auto/Source/Exit button will be Source hot key function (Only for the models with dual or more inputs).

#### **Clear Vision**

- 1. When there is no OSD, Press the "<" button to activate Clear Vision.
- 2. Use the "<" or ">" buttons to select between weak, medium, strong, or off settings. Default setting is always "off".

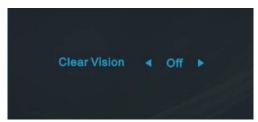

 Press and hold "<" button for 5 seconds to activate the Clear Vision Demo, and a message of "Clear Vision Demo: on" will be display on the screen for a duration of 5 seconds. Press Menu or Exit button, the message will disappear. Press and hold "<" button for 5 seconds again, Clear Vision Demo will be off.</li>



Clear Vision function provides the best image viewing experience by converting low resolution and blurry images into clear and vivid images.

Clear Vision	Off		
	Weak	Adjust the Clear Vision	
	Medium	Adjust the Clear Vision	
	Strong		
Clear Vision Demo	on or off	Disable or Enable Demo	

# **OSD Setting**

Basic and simple instruction on the control keys.



- 1. Press the III -button to activate the OSD window.
- 2. Press < or > to navigate through the functions. Once the desired function is highlighted, press the III -button to activate it . press < or > to navigate through the sub-menu functions. Once the desired function is highlighted, press
  IIII -button to activate it.
- 3. Press < or > to change the settings of the selected function. Press to exit. If you want to adjust any other function, repeat steps 2-3.
- 4. OSD Lock Function: To lock the OSD, press and hold the III button while the monitor is off and then press U button to turn the monitor on. To un-lock the OSD press and hold the III button while the monitor is off and then press U button to turn the monitor on.

#### Notes:

- 1. If the product has only one signal input, the item of "Input Select" is disable to adjust.
- 2. If the product screen size is 4:3 or input signal resolution is wide format, the item of "Image Ratio" is disable to adjust.
- 3. One of Clear vision, DCR, Color Boost, and Picture Boost functions is activated; the other three functions are turned off accordingly.

#### Luminance



1. Press III (Menu) to display menu.



2. Press < or > to select  $\bigstar$  (Luminance), and press III to enter.



3. Press < or > to select submenu, and press III to enter.



4. Press < or > to adjust.



5. Press to exit.

	Brightness	0-100	Backlight Adjustment
	Contrast	0-100	Contrast from Digital-register.
		Standard	Standard Mode
		Text	Text Mode
	Eco mode	Internet	Internet Mode
	Ecomode	Game	Game Mode
		Movie	Movie Mode
		Sports	Sports Mode
		Gamma 1	Adjust to Gamma 1
	Gamma	Gamma 2	Adjust to Gamma 2
		Gamma 3	Adjust to Gamma 3
	DCR	Off	Disable dynamic contrast ratio
	DUR	On	Enable dynamic contrast ratio


### Image Setup



1. Press III (Menu) to display menu.



2. Press < or > to select (Image Setup), and press III to enter.

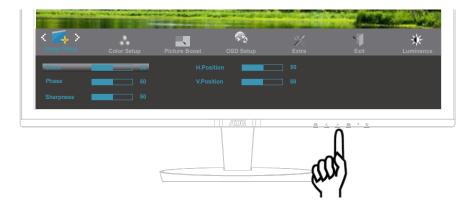

3. Press < or > to select submenu, and press III to enter.



4. Press < or > to adjust.




5. Press 🛨 to exit.

Clock Phase	Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
	Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise
	Sharpness	0-100	Adjust picture sharpness
· · ·	H.Position	0-100	Adjust the horizontal position of the picture.
	V.Position	0-100	Adjust the vertical position of the picture.


## Color Setup




1. Press III (Menu) to display menu.

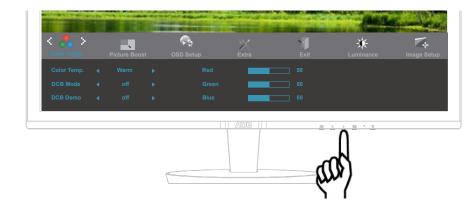


2. Press < or > to select (Color Setup), and press III to enter.

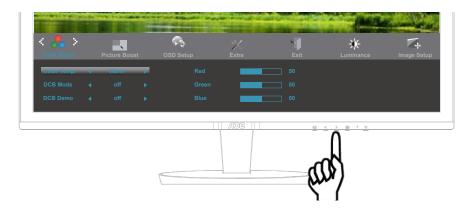

3. Press < or > to select submenu, and press III to enter.

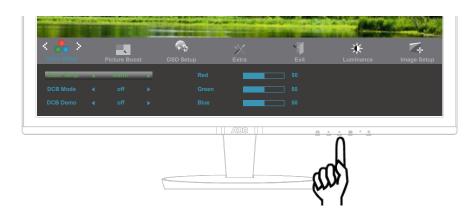

4. Press < or > to adjust.

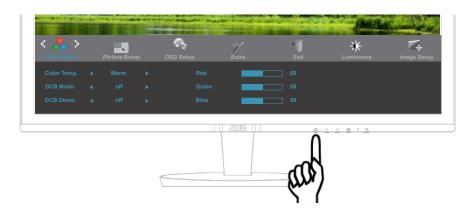


## 5. Press 🛨 to exit.

		Warm		Recall Warm Color Temperature from EEPROM.
		Normal		Recall Normal Color Temperature from EEPROM.
		Cool		Recall Cool Color Temperature from EEPROM.
	Color Temp.	sRGB		Recall SRGB Color Temperature from EEPROM.
			Red	Red Gain from Digital-register
	U	User	Green	Green Gain Digital-register.
			Blue	Blue Gain from Digital-register
	Nature Skin	Full Enhance	on or off	Disable or Enable Full Enhance Mode
		Nature Skin	on or off	Disable or Enable Nature Skin Mode
		Green Field	on or off	Disable or Enable Green Field Mode
		Sky-blue	on or off	Disable or Enable Sky-blue Mode
		AutoDetect	on or off	Disable or Enable AutoDetect Mode
	DCB Demo		On or off	Disable or Enable Demo

#### **Picture Boost**




1. Press III (Menu) to display menu.

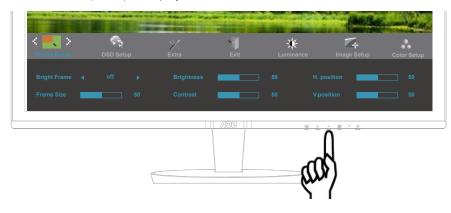

2. Press < or > to select (Picture Boost), and press III to enter.



3. Press < or > to select submenu, and press III to enter.

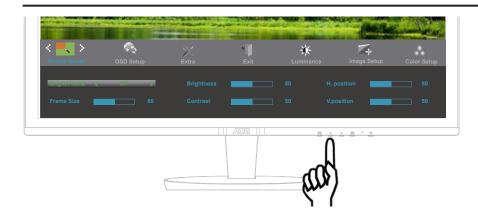

4. Press < or > to adjust.




5. Press to exit.

Frame Size	14-100	Adjust Frame Size
Brightness	0-100	Adjust Frame Brightness
Contrast	0-100	Adjust Frame Contrast
H. position	0-100	Adjust Frame horizontal Position
V.position	0-100	Adjust Frame vertical Position
Bright Frame	on or off	Disable or Enable Bright Frame

## OSD Setup




1. Press III (Menu) to display menu.

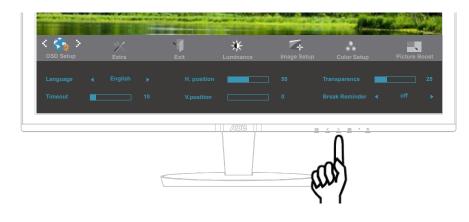

2. Press < or > to select (OSD Setup), and press III to enter.



3. Press < or > to select submenu, and press III to enter.

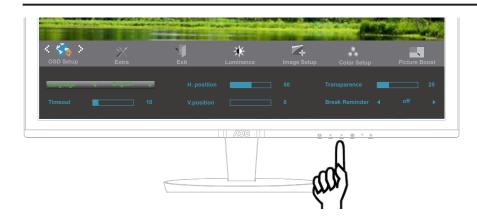

4. Press < or > to adjust.



5. Press 🛨 to exit.

ŀ	H.Position	0-100	Adjust the horizontal position of OSD
	V.Position	0-100	Adjust the vertical position of OSD
	Timeout	5-120	Adjust the OSD Timeout
	Transparence	0-100	Adjust the transparence of OSD
	Language		Select the OSD language
	Break Reminder	on or off	Break reminder if the user continuously work for more than 1hrs

#### Extra



1. Press III (Menu) to display menu.




2. Press < or > to select  $\rightarrow$  (Extra), and press  $\square$  to enter.



3. Press < or > to select submenu, and press III to enter.



4. Press < or > to adjust.

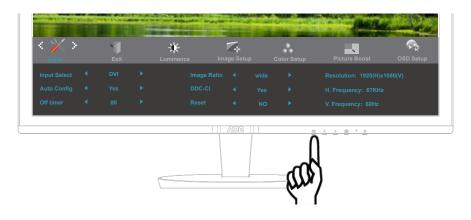


5. Press 🛨 to exit.

Input Select	Auto / D-SUB / DVI / HDMI	Select Input Signal Source
Auto Config	yes or no	Auto adjust the picture to default
Off timer	0-24hrs	Select DC off time
Image Ratio	wide or 4:3	Select wide or 4:3 format for display
DDC-CI	yes or no	Turn ON/OFF DDC-CI Support
Reset	Yes or no	Reset the menu to default
Information		Show the information of the main image and sub-image source

## Exit



1. Press III (Menu) to display menu.

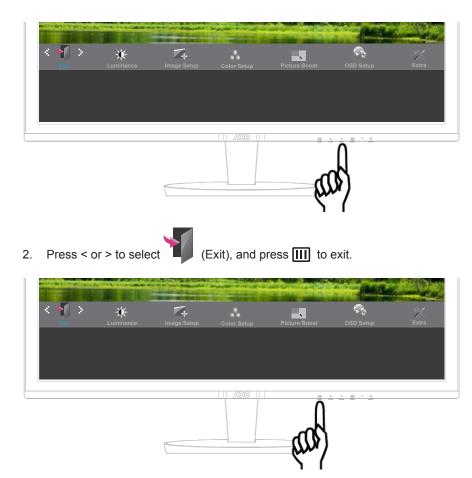

3. Press to exit.

# **LED Indicator**

Status	LED Color
Full Power Mode	Green
Active-off Mode	Orange

# Driver

## **Monitor Driver**

## Windows 8

- 1. Start Windows® 8
- 2. Right click and click **All apps** at the bottom-right of the screen.



- 3. Click on the "Control panel" icon
- 4. Set the "View by" to "Large icons" or "Small icons".

					All Control Panel	Items					- 6	×
1.6	- 🕆 🧐 + Control Panel +	All Control I	Panel Items						~ C	Search I	Control Panel	5
djus	t your computer's settings									View by:	Large icons *	
pt	Action Center	<b>1</b>	Administrative Tools		AutoPlay	-	BitLocker Drive Encryption	2	Color Management		Category     Large icons     Small icons	
a	Credential Manager	r	Date and Time		Default Programs	-	Device Manager	-	Devices and Printers			
	Display	G	Ease of Access Center	23	Family Safety		File History	£	Flash Player (32-bit)			
R	Folder Options	A	Fonts	•3	HomeGroup	P	Indexing Options	10-1	Internet Options			
-	Keyboard	AF.	Language		Location Settings	3	Mouse	tt	Network and Sharing Center			
	Notification Area Icons	2	NVIDIA Control Panel		Performance Information and Tools		Personalization	3	Phone and Modem			
2	Power Options	阆	Programs and Features	1	Recovery		Region	٠	RemoteApp and Deskt Connections	юр		
0	Sound	8	Speech Recognition		Storage Spaces	۲	Sync Center	-	System			
	Taskbar		Troubleshooting	92	User Accounts	*	Windows 7 File Recovery	龃	Windows Defender			
1	Windows Firewall	4	Windows Update									

e 📑 🔛
-------

11:16 PM 12/25/201 5. Click on the "Display" icon.

Action Center	Administrative Tools	AutoPlay	Backup and Restore	
Color Management	Credential Manager	a Date and Time	🕐 Default Programs	
Desktop Gadgets	Jevice Manager	ma Devices and Printers	💐 Display	
Ease of Access Center	Folder Options	Fonts	Getting Started	
& HomeGroup	Indexing Options	C Internet Options	<ul> <li>Keyboard</li> </ul>	
Location and Other Sensors	J Mouse	Network and Sharing Center	E Notification Area Icons	
NVIDIA Control Panel	MVIDIA PhysX	🍂 Parental Controls	/ Pen and Touch	
Performance Information and Tools	Personalization	Phone and Modem	Power Options	
Programs and Features	Realtek HD Audio Manager	🕷 Recovery	A Region and Language	
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting	
User Accounts	Sundows Anytime Upgrade	Windows CardSpace	Windows Defender	
Windows Firewall	Register Windows Update			

6. Click on the "Change display settings" button.

🕒 💽 - 🧖 🔹 Control Panel 🕨	All Control Panel Items      Display		Search Control Panel
Control Panel Home Adjust resolution S Calibrate color	Make it easier to read what's or You can change the size of text and othe temporarily enlarge just part of the scree	r items on your screen by choosing one of these options. To	
Change display settings Adjust ClearType text	Smaller - 100%	Preview	
Set custom text size (DPI)	<ul> <li>Medium - 125% (default)</li> </ul>		
	Larger - 150%		
		Apply	
See also Personalization Devices and Printers			

7. Click the "Advanced Settings" button.

	Contraction of the local division of the loc	
Control Panel + All Control Panel Items + Display + Screen Resolution	▼ ♣ Search Control Panel	Ŗ
Change the appearance of your display		
Detect.		
Display: 1. Notica Default Flat Panel		
Orientation: Landscape   Adsanced settings		
Make tort and other kens large or smaller What display settings should I choose?		
OK Cancel Apply		


8. Click the "Monitor" tab and then click the "Properties" button.

4	Generic PnP Monitor
Monit	or Settings
Scre	en refresh rate:
60 H	ertz 👻
Clear	ide modes that this monitor cannot display ring this check box allows you to select display modes that this monitor of display correctly. This may lead to an unusable display and/or aged hardware.
Colo	15
	s: color (32 bit)


9. Click the "Driver" tab.

Driver	Details	
Gene	ric PnP Mo	nitor
Drive	r Provider.	Microsoft
Drive	r Date:	6/21/2006
Drive	r Version:	6.1.7600.16385
Digita	Il Signer:	Microsoft Windows
ver Det	ails	To view details about the driver files.
ate Driv	/er	To update the driver software for this device.
Back D	river	If the device fails after updating the driver, roll back to the previously installed driver.
Disable		Disables the selected device.
Jninstal	L	To uninstall the driver (Advanced).
	Gene Drive Drive Digitz Ver Dett late Driv Back D	Generic PnP Mo Driver Provider: Driver Provider: Driver Version: Digital Signer: Ver Details late Driver Back Driver Disable Jininstall

10. Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... " and then click the "Browse my computer for driver software" button.

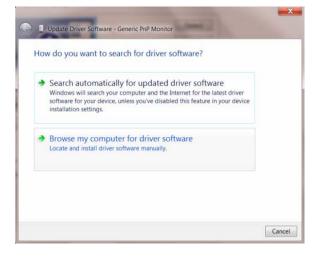

11. Select "Let me pick from a list of device drivers on my computer".

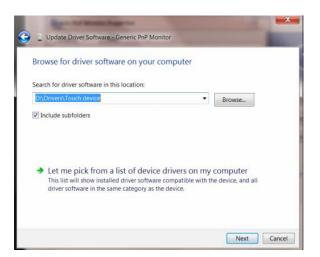

12. Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).




- 13. Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- 14. Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- 15. Close all open windows and remove the CD.
- 16. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

## Windows 7

- 1. Start Windows® 7
- 2. Click on the 'Start' button and then click on 'Control Panel'.



3. Click on the 'Display' icon.

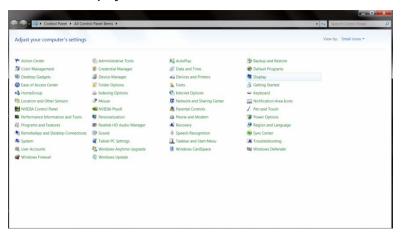

4. Ckick on the "Change display settings" button.

🕒 🔁 - 🔍 🕈 Control Panel 🕨	All Control Panel Items + Display		Search Cantrol Panel 👂
Control Panel Home	Make it easier to read what's or	n your screen	0
Adjust resolution S Calibrate color		r items on your screen by choosing one of these options. To	
Change display settings Adjust ClearType text	🐑 Smaller - 100%	Preview	
Set custom text size (DPI)	<ul> <li>Medium - 125% (default)</li> </ul>		
	Larger - 150%		
		Apply	
See also			
Personalization Devices and Printers			


5. Click the "Advanced Settings" button.

🚱 🌍 - 🔍 • Control Panel • All Control Panel Ite	mc I: Dicnlay I: Screen Recolution	Search Control Panel P
	Change the appearance of your display	
	Display: Li Neida Default Flat Parel • Resolution: \$900x500 (recommended) • Orientation: Landscape • Advanced settinge	
	Make text and other items larger or smaller What display settings should 1 choose?	
	OK Cencel Apply	


6. Click the "Monitor" tab and then click the "Properties" button.

dapter	Monitor	Troubleshoo	t Color Manageme	ent GeForce 9100M G
Monit	or Type			
		ric PnP Monito	15	
0	Gene	ine i fili monite	4	
				Properties
	Collinson			
	or Settings			
Scre	en refresh	rate:		
60 H	ertz			•
Clea	ring this ch	eck box allow	s you to select displ	lay modes that this monitor
cenn demi	ot display aged hard	correctly. This		ay modes that this monitor sable display and/or
cann dami	ot display aged hard rs:	correctly. This ware.		
cann dami	ot display aged hard	correctly. This ware.		
cann dami	ot display aged hard rs:	correctly. This ware.		
cann dami	ot display aged hard rs:	correctly. This ware.		
cann dami	ot display aged hard rs:	correctly. This ware.		
cann dami	ot display aged hard rs:	correctly. This ware.		
cann dami	ot display aged hard rs:	correctly. This ware.		

7. Click the "Driver" tab.

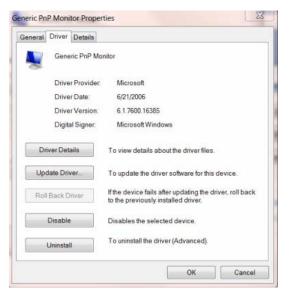


8. Open the **"Update Driver Software-Generic PnP Monitor"** window by clicking on **"Update Driver...** "and then click the **"Browse my computer for driver software"** button.

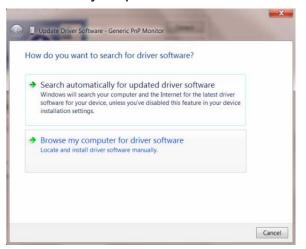

9. Select "Let me pick from a list of device drivers on my computer".



10. Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

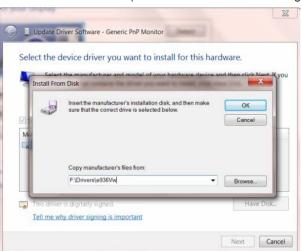

- 11. Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- 12. Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- 13. Close all open windows and remove the CD.
- 14. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

## Windows Vista

1. Click "Start " and "Control Panel". Then, double-click on "Appearance and Personalization".



2. Click "Personalization" and then "Display Settings".



3. Click "Advanced Settings...".



4. Click **"Properties"** in the **"Monitor"** tab. If the **"Properties"** button is deactivated, it means the configuration for your monitor is completed. The monitor can be used as is.


If the message "Windows needs..." is displayed, as shown in the figure below, click "Continue".

Generic PnP Monitor and NVIDUA GeForce 6600 LE (Microsoft Co      Magner Monitor Troubleshoot, Color Management,     Monitor Type     Generic PnP Monitor	
Poperties	User Account Control
Monitor Settings Spreen refresh rate:	Windows needs your permission to contionue.
60 Hertz • Glde modes that this monitor cannot display Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.	If you started this action, continue.
	Oetails     Continue     Cancel
OK Cancel Apply	User Account Control helps stop unauthorized changes to your computer.

5. Click "Update Driver..." in the "Driver" tab.

eneric PnP Monitor Properties	Generic PnP Monitor Properties
General Driver Details	General Driver Detata
Genetic PhiP Montor	Genesic PriP Monitor
Device type: Montons Manufacture: (Standard montor types) Location: on IWDIA GeForce 6600 LE (Microsoft Corpo Device status	Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.0.6000.16386 Digital Signer: microsoft windows
This device is working property.	Dryver Details         To veew details about the driver files.           Update Driver         To update the driver software for this device.           Bolt Back Conver         The device fails after updating the driver, mill back to the previously initiated driver.           Deable         Deables the selected device.
OK Canod	Uninstal To uninstal the driver (Advanced).

6. Check the "Browse my computer for driver software" checkbox and click "Let me pick from a list of device drivers on my computer".

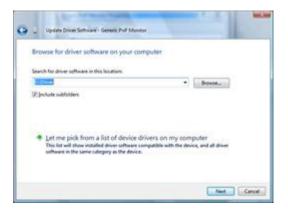


- 7. Click on the **'Have disk...'** button, then click on the **'Browse...'** button and then select the appropriate drive F:\Driver (CD-ROM Drive).
- 8. Select your monitor model and click on the 'Next' button.
- 9. Click "Close"  $\rightarrow$  "Close"  $\rightarrow$  "OK"  $\rightarrow$  "OK" on the following screens displayed in sequence.

## Windows XP


- 1. Start Windows® XP
- 2. Click on the 'Start' button and then click on 'Control Panel'.




3. Select and click on the category 'Appearance and Themes'

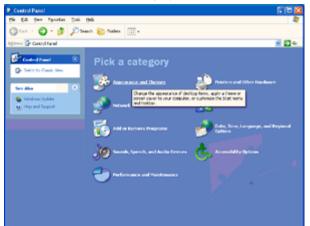

4. Click on the 'Display' Item.

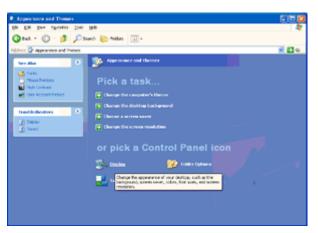

5. Select the 'Settings' tab then click on the 'Advanced' button.

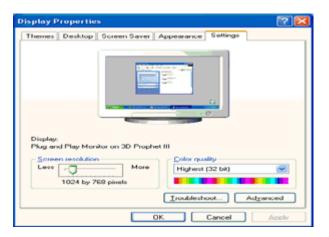

#### 6. Select 'Monitor' tab

- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.

- If the 'Properties' button is active, click on 'Properties' button.

Please follow the steps below.

Plug and Play Monitor and 3D Prophet III Properties 👘 😰
Color Correction General Adapter Monitor Troubleshoot Color Management Monitor type Plug and Play Monitor Properties
Monitor settings Screen refresh rate: 60 Hertz
Hide modes that this monitor cannot display Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.
OK Cancel Apply


7. Click on the 'Driver' tab and then click on 'Update Driver...' button.

Plug	and Play Monitor Properties	2 🔀
Gerv	evel Driver	
1	Plug and Play Monitor	
	Device type: Monitors	
	Manufacturer: (Standard monitor types)	
	Location: on 3D Prophet III	
C.0	evice status	
III P	This device is working properly.	~
	f you are having problems with this device, click Troubleshoot to start the troubleshooter.	
		~
	Iroubleshoot	
	vice usage: .e this device (enable)	~
L	ОК С	Cancel

8. Select the 'Install from a list or specific location [advanced]' radio button and then click on the 'Next' button.

Hardware Update Wizard				
	Welcome to the Hardware Update Wizard			
	This wizard helps you install software for:			
	Plug and Play Monitor			
	What do you want the wizard to do? Install the software automatically [Recommended] Install the software automatically [Recommended] Install then a list or greatific location (Advanced] Click Next to continue.			
	Cancel			

9. Select the 'Don't Search. I will choose the driver to install' radio button. Then click on the 'Next' button.

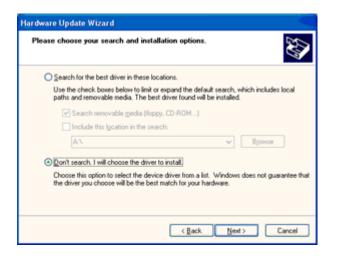

10. Click on the **'Have disk...'** button, then click on the **'Browse...'** button and then select the appropriate drive F: (CD-ROM Drive).



- 11. Click on the 'Open' button, then click the 'OK' button.
- 12. Select your monitor model and click on the 'Next' button.

- If you can see the 'has not passed Windows® Logo testing to verify its compatibility with Windows® XP' message, please click on the 'Continue Anyway' button.

- 13. Click on the 'Finish' button then the 'Close' button.
- 14. Click on the 'OK' button and then the 'OK' button again to close the Display Properties dialog box.

## Windows 2000

- 1. Start Windows® 2000
- 2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
- 3. Double click on the 'Display' Icon.
- 4. Select the 'Settings' tab then click on 'Advanced...'.
- 5. Select 'Monitor'
- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.
- If the 'Properties' button is active. Click on 'Properties' button. Please follow the steps given below.
- 6. Click on 'Driver' and then click on 'Update Driver...' then click on the 'Next' button.
- 7. Select 'Display a list of the known drivers for this device so that I can choose a specific driver', then click on 'Next' and then click on 'Have disk...'.
- 8. Click on the 'Browse...' button then select the appropriate drive F: ( CD-ROM Drive).
- 9. Click on the 'Open' button, then click on the 'OK' button.
- 10. Select your monitor model and click on the 'Next' button.
- 11. Click on the 'Finish' button then the 'Close' button.

If you can see the 'Digital Signature Not Found' window, click on the 'Yes' button.

## Windows ME

- 1. Start Windows® Me
- 2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
- 3. Double click on the 'Display' Icon.
- 4. Select the 'Settings' tab then click on 'Advanced...'.
- 5. Select the 'Monitor' button, then click on 'Change...' button.
- 6. Select 'Specify the location of the driver(Advanced)' and click on the 'Next' button.
- 7. Select 'Display a list of all the drivers in a specific location, so you can choose the driver you want', then click on 'Next' and then click on 'Have Disk...'.
- 8. Click on the 'Browse...' button, select the appropriate drive F: ( CD-ROM Drive) then click on the 'OK' button.
- 9. Click on the 'OK' button, select your monitor model and click on the 'Next' button.
- 10. Click on 'Finish' button then the 'Close' button.

# i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

i-Menu	Lumii	nance	98
		×	
Contrast	<u> </u>	🔆 Brightness	50
γ Gamma	d Gamma 1 ▶	🌾 Eco Mode	∢ 🗹 ▶
📑 DCR	<b>S</b>		
			۲
10 .	7	DC	

## e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC status, you may choose from the pull-down menu the desired time (in minutes) for your monitor to automatically shutdown. The example above illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.



You can click "RESET" to set the e-Saver to its default settings like below.



## Screen+



Welcome to "Screen+" software by AOC, Screen+ software is a desktop screen splitting tool, it splits the desktop into different panes, each pane displays a different window. You only need to drag the window to a corresponding pane, when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it.



# Troubleshoot

Possible Solutions
Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.
<ul> <li>Is the power cord connected properly?</li> <li>Check the power cord connection and power supply.</li> <li>Is the cable connected correctly?</li> <li>(Connected using the D-sub cable)</li> <li>Check the DB-15 cable connection.</li> <li>(Connected using the DVI cable)</li> <li>Check the DVI cable connection.</li> <li>* DVI input is not available on every model.</li> <li>(Connected using the HDMI cable)</li> <li>Check the HDMI cable connection.</li> <li>* HDMI input is not available on every model.</li> <li>(Connected using the HDMI cable)</li> <li>Check the HDMI cable connection.</li> <li>* HDMI input is not available on every model.</li> <li>If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen.</li> <li>If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card.</li> <li>(Refer to the Setting the Optimal Resolution)</li> <li>If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.</li> <li>Can you see "Input Not Supported" on the screen?</li> <li>You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly.</li> <li>Adjust the maximum resolution and frequency that the monitor can handle properly.</li> </ul>
Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back .
Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution your are using.
The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Adjust H-Position and V-Position or press hot-key (AUTO).
Adjust RGB color or select desired color temperature.
Use Windows 95/98/2000/ME/XP shut-down mode Adjust CLOCK and FOCUS. Press to auto-adjust.

# **Specification**

# **General Specification**

	Model name	I2778VHE6			
Panel	Driving system	TFT Color LCD			
	Viewable Image Size	68.6 cm diagonal			
	Pixel pitch	0. 311 mm(H) x 0. 311 mr	n(V)		
	Video	R, G, B Analog Interface 8	& DVI, HDMI interface		
	Separate Sync.	H/V TTL			
	Display Color	16.7M Colors			
	Pixel clock	148.5 MHz			
	Horizontal scan range	30 kHz - 83 kHz			
	Horizontal scan Size(Maximum)	597.89 mm			
	Vertical scan range	50 Hz - 76 Hz			
	Vertical scan Size(Maximum)	336.31 mm			
	Optimal preset resolution	1920 x 1080 (60 Hz)			
Decolution	Plug & Play	VESA DDC2B/CI			
Resolution	Input Connector	VGA / HDMI / DVI			
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, TMDS			
	Power Source	100-240V~,50/60Hz, 1.5A			
	Power Consumption	Active 31 W (typical)	Active 31 W (typical)		
		Standby < 0.5 W			
	Off timer	0~24 hrs			
	Connector Type	VGA / HDMI / DVI			
	Signal Cable Type	Detachable			
Physical		Height (with base)	470.7 mm		
Characteristics	Dimonsions & Woight	Width	640.3 mm		
	Dimensions & Weight	Depth	229.1 mm		
		Weight (monitor only)	5.98 kg		
	Tomporaturo	Operating	0°C to 40°C		
	Temperature	Non-Operating	-25°C to 55°C		
Environmental	Humidity	Operating	10% to 85% (non-condensing)		
		Non-Operating	5% to 93% (non-condensing)		
	Altitude	Operating	0~ 5000m (0~ 16404 ft )		
	Altitude	Non-Operating	0~ 12192m (0~ 40000 ft )		


STANDARD	RESOLUTION	HORIZONTAL FREQUENCY(kHZ)	VERTICAL FREQUENCY(Hz)
	640×480 @60Hz	31.469	59.94
VGA	640×480 @72Hz	37.861	72.809
	640×480 @75Hz	37.5	75
MAC MODE VGA	640 × 480@67Hz	35	66.667
IBM-MODE DOS	720×400@70Hz	31.469	70.087
	800×600 @56Hz	35.156	56.25
SVGA	800×600 @60Hz	37.879	60.317
SVGA	800×600 @72Hz	48.077	72.188
	800×600 @75Hz	46.875	75
MAC MODE SVGA	832×624@75Hz	49.725	74.5
	1024×768 @60Hz	48.363	60.004
XGA	1024×768 @70Hz	56.476	70.069
AGA	1024×768 @72Hz	57.669	71.996
	1024×768 @75Hz	60.023	75.029
	1280×1024@60Hz	63.981	60.02
SXGA	1280x1024@70Hz	74.882	69.853
	1280×1024@75Hz	79.976	75.025
WXGA+	1440×900 @60Hz	55.935	59.887
WSXGA+	1680×1050 @60Hz	65.29	59.954
FHD	1920 × 1080@60Hz	67.5	60

## **Preset Display Modes**

### HDMI timing


Format	Resolution	Vertical frequency
480p	640x480	60Hz
480p	720x480	60Hz
576p	720x576	50Hz,
720p	1280x720	50Hz,60Hz
1080i	1920x1080	50Hz,60Hz
1080p	1920x1080	50Hz,60Hz

# **Pin Assignments**




## 15-Pin Color Display Signal Cable

Pin Number	Signal Name	Pin Number	Signal Name	Pin Number	Signal Name
1	Video-Red	6	GND-R	11	N.C.
2	Video-Green	7	GND-G	12	DDC-Serial data
3	Video-Blue	8	GND-B	13	H-sync
4	N.C.	9	+5V	14	V-sync
5	Detect Cable	10	Ground	15	DDC-Serial clock



### 24-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1.	TMDS Data 2-	9.	TMDS Data 1-	17.	TMDS Data 0-
2.	TMDS Data 2+	10.	TMDS Data 1+	18.	TMDS Data 0+
3.	TMDS Data 2/4 Shield	11.	TMDS Data 1/3 Shield	19.	TMDS Data 0/5 Shield
4.	TMDS Data 4- / N.C.	12.	TMDS Data 3- / N.C.	20.	TMDS Data 5- / N.C.
5.	TMDS Data 4+ / N.C.	13.	TMDS Data 3+ / N.C.	21.	TMDS Data 5+ / N.C.
6.	DDC Clock	14.	+5V Power	22.	TMDS Clock Shield
7.	DDC Data	15.	Ground(for +5V)	23.	TMDS Clock +
8.	N.C.	16.	Hot Plug Detect	24.	TMDS Clock -



### 19-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2+	9	TMDS Data 0-	17	DDC/CEC Ground
2	TMDS Data 2 Shield	10	TMDS Clock +	18	+5V Power
3	TMDS Data 2-	11	TMDS Clock Shield	19	Hot Plug Detect
4	TMDS Data 1+	12	TMDS Clock -		
5	TMDS Data 1Shield	13	CEC		
6	TMDS Data 1-	14	Reserved (N.C. on device)		
7	TMDS Data 0+	15	SCL		
8	TMDS Data 0 Shield	16	SDA		

## **Plug and Play**

### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

# Regulation

# FCC Notice

#### FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

#### NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

## **WEEE Declaration**

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste.Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product .

## **WEEE Declaration for India**



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste equipment for recycling in India please visit the below web link.

www.aocindia.com/ewaste.php.

This product complies with all implemented RoHS type regulations worldwide, including but not limited to, EU, Korea, Japan, US States (e.g. California), Ukraine, Serbia, Turkey, Vietnam and India.

We continue to monitor, influence and develop our processes to comply with upcoming proposed RoHS type regulations, including but not limited to, Brazil, Argentina, Canada.

#### **Restriction on Hazardous Substances statement (India)**

This product complies with the "India E-waste Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

# **EPA Energy Star**



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) BV and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

## **TCO DOCUMENT**

# **Congratulations!**

#### This product is designed for both you and the planet!



TCO Development works for sustainable IT manufacture, use and recycling of IT products reflecting environmental, social and economic responsibility.

TCO Certified is a third party verified program, where every product model is tested by an accredited impartial test laboratory. TCO

Certified represents one of the toughest certifications for ICT products worldwide.

#### Some of the Usability features of TCO Certified Displays:

- Visual Ergonomics for image quality is tested to ensure top performance and reduce sight and strain problems. Important parameters are Resolution, Luminance, Contrast, Reflection and Colour characteristics
- Products are tested according to rigorous safety standards at impartial laboratories
- Electric and magnetic fields emissions as low as normal household background levels
- Workload ergonomics to ensure a good physical environment

#### Some of the Environmental features of TCO Certified Displays:

- Production facilities have an Environmental Management System (EMAS or ISO 14001)
- Low energy consumption to minimize climate impact
- Restrictions on Chlorinated and Brominated flame retardants, plasticizers, plastics and heavy metals such as cadmium, mercury and lead (RoHS compliance)
- Both product and product packaging is prepared for recycling
- The brand owner offers take-back options

#### Corporate Social Responsibility

 The brand owner demonstrates the product is manufactured under working practices that promote good labour relations and working conditions.

The Criteria Document can be downloaded from our web site. The criteria included in this label have been developed by TCO Development in co-operation with scientists, experts, users as well as manufacturers all over the world. Since the end of the 1980s TCO has been involved in influencing the development of IT equipment in a more user and environmentally friendly direction. Our ICT product labeling system began in 1992 and is now requested by users and ICT-manufacturers all over the world.

For more information, please visit www.tcodevelopment.com

TCO Certified Document for Displays version. 2.3



# Service

## Warranty Statement for Europe

### LIMITED THREE-YEAR WARRANTY\*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section onwww. aoc-europe.comfor the warranty instructions in your country. The freight cost for the warranty is pre-paid by AOC for the delivery and return.Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized ServiceCenter
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquake and terrorist attacks
- · Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified or Authorized Service Center will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice.For more information, please visit: http://www.aoc-europe.com

## Warranty Statement for Middle East and Africa (MEA)

## And

## The Commonwealth of Independent States (CIS)

## LIMITED ONE to THREE YEARS WARRANTY\*

For AOC LCD Monitors sold within the Middle East and Africa (MEA) and the Commonwealth of Independent States (CIS), AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of One (1) to Three (3) years from the manufacture date depending on sale country. During this period, AOC International (Europe) B.V. offers a Carry-In (return to Service Center)Warranty Support at an AOC's Authorized Service Center or Dealer andat its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. As a Standard Policy,the warranty will be calculated from the manufacture date identified from the product ID serial number, but the total warranty will be Fifteen (15) months to Thirty Nine (39) months from MFD (manufacture date) depending on sale country. Warranty will be considered for exceptional cases that are out of warranty as per the product ID serial number and for such exceptional cases; Original Invoice/Proof Of Purchase Receipt is mandatory.

If the product appears to be defective, please contact your AOC authorized dealer or refer to the service and support section on AOC's website for the warranty instructions in your country:

- Egypt: http://aocmonitorap.com/egypt\_eng
- CIS Central Asia: http://aocmonitorap.com/ciscentral
- Middle East: http://aocmonitorap.com/middleeast
- South Africa: http://aocmonitorap.com/southafrica
- Saudi Arabia: http://aocmonitorap.com/saudiarabia

Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Authorized Service Center or Dealer under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenanceother then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- · Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquakes and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified, Authorized Service Centeror dealerwill provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF ONE (1) to THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit:http://www.aocmonitorap.com



AOC International (Europe) B.V. Prins Bernhardplein 200 / 6th floor, Amsterdam, The Netherlands Tel: +31 (0)20 504 6962 • Fax: +31 (0)20 5046933


# AOC PIXEL POLICY ISO 9241-307 CLASS 1

July 25<sup>th</sup>, 2013

AOC strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but AOC guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This Pixel Policy explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels.

#### **Pixels and Sub Pixel Definition**

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. When all sub pixels of pixel are lit, the three colored sub pixel together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel.

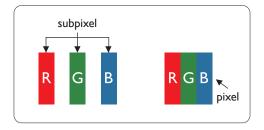

#### **Types of Pixel Defects**

- Bright Dot Defects: the monitor displays a dark pattern, sub pixels or pixels are always lit or "on"
- Black Dot Defects: the monitor displays a light pattern, sub pixels or pixels are always dark or "off".

ISO 9241-307 Pixel Defect Class	Defect Type 1 right Pixel	Defect Type 2 lack Pixel	Defect Type 3 right Sub pixel	Defect Type 4 Black Sub pixel
			2 -	+ 1
Classe 1	1	1	1 -	+ 3
			0 -	⊦ 5

AOC International (Europe) B.V.

## Warranty Statement for North & South America (excluding

# Brazil)

## WARRANTY STATEMENT for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/warranty ARGENTINA: http://ar.aoc.com/support/warranty BOLIVIA: http://bo.aoc.com/support/warranty CHILE: http://cl.aoc.com/support/warranty COLOMBIA: http://co.aoc.com/warranty COSTA RICA: http://cr.aoc.com/support/warranty DOMINICAN REPUBLIC: http://do.aoc.com/support/warranty ECUADOR: http://ec.aoc.com/support/warranty EL SALVADOR: http://sv.aoc.com/support/warranty **GUATEMALA:** http://gt.aoc.com/support/warranty HONDURAS: http://hn.aoc.com/support/warranty NICARAGUA: http://ni.aoc.com/support/warranty PANAMA: http://pa.aoc.com/support/warranty **PARAGUAY:** http://py.aoc.com/support/warranty PERU: http://pe.aoc.com/support/warranty URUGUAY: http://pe.aoc.com/warranty VENEZUELA: http://ve.aoc.com/support/warranty IF COUNTRY NOT LISTED: http://latin.aoc.com/warranty

# EASE PROGRAME



Only for AOC branded monitors sold within the continental United States.

All AOC branded monitors are now covered by the EASE Program. If your monitor malfunctions at any time during the first three months, AOC will provide a replacement monitor within 72 hours after you are approved for our program. If your monitor qualifies for the EASE program, AOC will pay for freight both ways.

**Step 1:** Phone our TECH Department at 888.662.9888 **Step 2:** Fill out and return EASE registration forms by mail or fax.

Step 3: We will issue a Return Authorization Number upon verification into the program.

**Step 4:** A monitor will be advance shipped to your location.

Step 5: We will issue a UPS Call Tag to pick up the defective unit.

Step 6: Please review the following chart to see your EASE program qualifications.

WARRANTY	COVERAGE AT	CUSTOMER	
PERIOD	NO CHARGE	CHARGES	
Within the first three months of purchase: Covered by EASE	<ul> <li>New AOC monitor</li> <li>Call tag dispatched and return freight charges via UPS</li> </ul>	- None*	
Between 4 months – 1 Year	- All Parts & Labor Including CRT Tube & LCD Panel	- UPS Return Freight to AOC	
Between 1 Year - 3 Years: Covered by standard limited warranty	<ul> <li>Parts &amp; Labor (excluding CRT Tube &amp; LCD Panel)</li> </ul>	- UPS Return Freight to AOC	

\*AOC will need to obtain a credit card number if you would like to get a new AOC monitor advanced shipped to your location, prior to the defective unit arriving at AOC's service center. If you do not wish to supply a credit card, AOC will only ship the new monitor, once the defective unit arrives at the AOC service center.

